



REMARKS:
on the PCB has two varister VR1 & VR2,

1)VR1 to adjust the RX1,egi: set the receiver channel travel at +100%~+150%, the BL(or RL LL HL) will be off,if not,you can adjust the VR1(anticlockwise) ,then set the travel at -100%~-150%, the BL(or RL LL HL)will be on,otherwise you can adjust the VR1(clockwise)

2)VR2 to adjust the tail light, adjust the VR2 (anticlockwise) for brighter.

GENERAL		SCALE:		SHENZHEN LANDER TECHNOLOGY CO.,LTD.		APP'D Customer	
		MATERIAL:		RCL-0909-2		DATE: 2009. 10. 29	
		P/N:		CHECK: Mose Xu		REV: 02	
		DREW/N:					